


Neptun ProW Control Module Connection Schematics

Auxiliary equipment
(available upon request)

If more than 2 valves need to be connected or 230V powered valves to be connected:

Valve Connection Unit

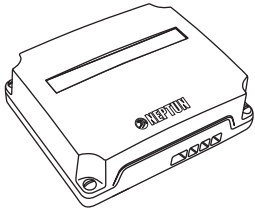


If more than 2 valves need to be connected:

12V External Power Source with less than 36W (3 A)



If more wired sensors need to be connected:


Wired Sensors Extension Unit

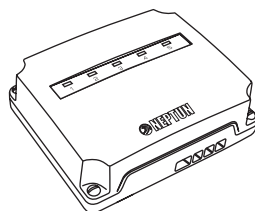


External Valve Management Connection
Valves are closed in DISCONNECTED position, valves are open in CONNECTED position. A standard remote control switch or a GSM module for operating the valves by text messaging may be connected to these cleats

Reversible dry contact (5A max)

- GSM Module
- Light or alarm siren
- Pump

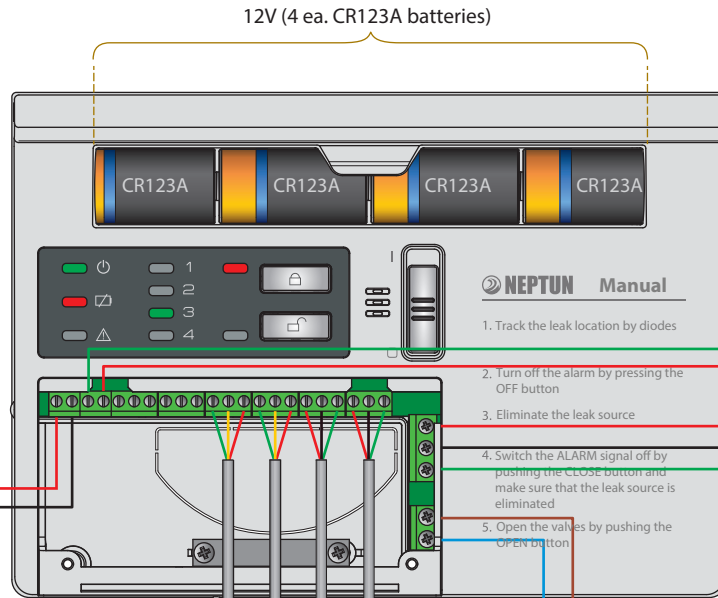

12V Ball Valve
Installed after inlet valves.
Installed valves quantity:
Internal power source used – 2 pcs.
External power source used – up to 6 pcs.

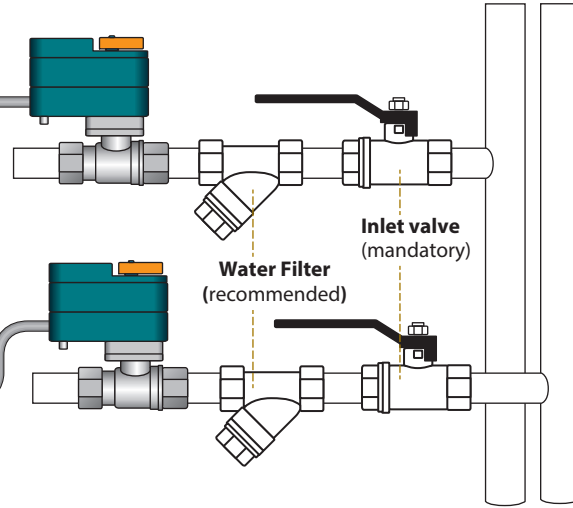


may be extended up to 100 m FTP2 CAT5 cable or equivalent


may be extended up to 100 m 4x0,5 Cable

Power 230V

up to 375 pcs.

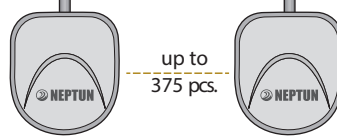

Valve correct position:

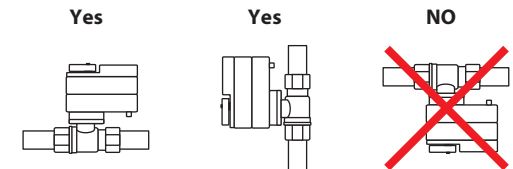


CONGRATULATIONS! You purchased Neptun Leak Detection / Flood Prevention System!


Kit Components:




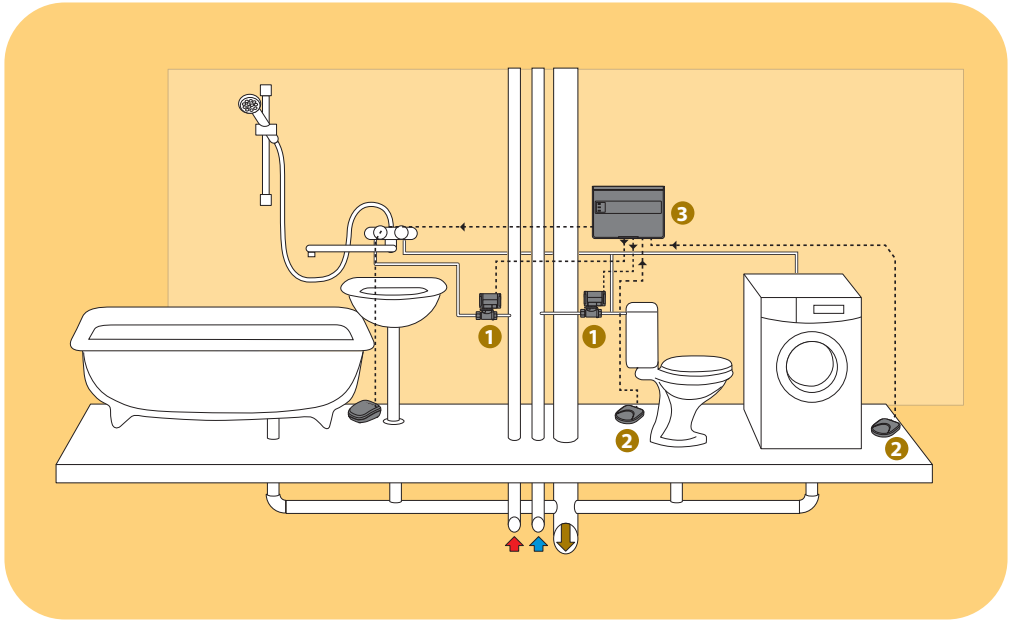
Draw the System Installation Plan




Switch the ALARM signal off (🔒 ×1), open valves (🔓 ×1).

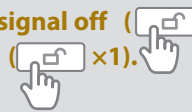

The System is ready! Now your home is protected!


Install the valves 1

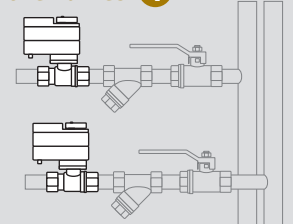


The valves are to be installed AFTER the inlet valves!!! (see the reverse)

Install the wired sensors 2

Aflush the floor

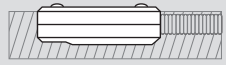


Up on the floor surface



Operation Check


Connect the sensor contacts with metal object

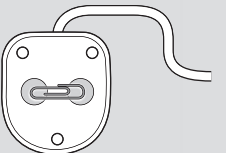

Make sure that the valve/s have closed

Connect all the System components


For installation, please remove the device front cover lid

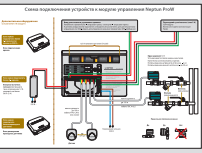

See the reverse for Connection Schematics


Install the Control Module

For installation, please remove the device front cover lid

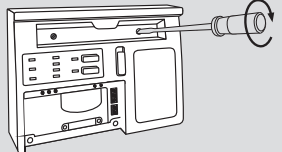


Control Module is connected with four screws in the Battery compartment (not included)

Provide the power for the Module

230V:  (standard)

or

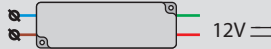12V:  230V ~ 12V =

(option, 12V power unit is not included into the Set)