


Neptun ProW+ Control Module Connection Schematics

Auxiliary equipment
(available upon request)


If Wireless Sensor range needs to be expanded

RSW+ Router

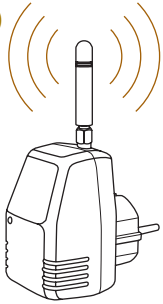


If more than 2 valves need to be connected or 230V powered valves to be connected:

Valve Connection Unit

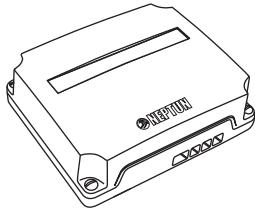


If more than 2 valves need to be connected:

12V External Power Source with less than 36W (3 A)

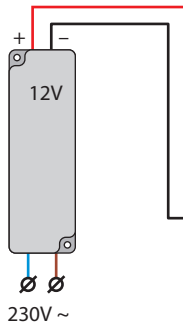



If more wired sensors need to be connected:

Wired Sensors Extension Unit

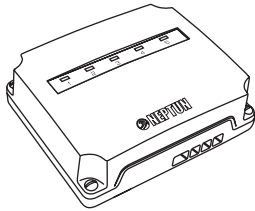

If it is necessary to remotely operate the pump, the valve, and/or other components during the accident


Radio Relay
• 5 pcs. max

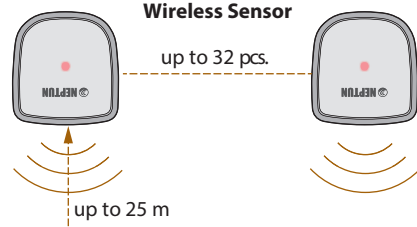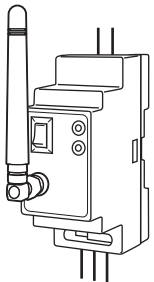



External Valve Management Connection
Valves are closed in DISCONNECTED position, valves are open in CONNECTED position. A standard remote control switch or a GSM module for operating the valves by text messaging may be connected to these cleats

Reversible dry contact (5A max)


- GSM Module
- Light or alarm siren
- Pump

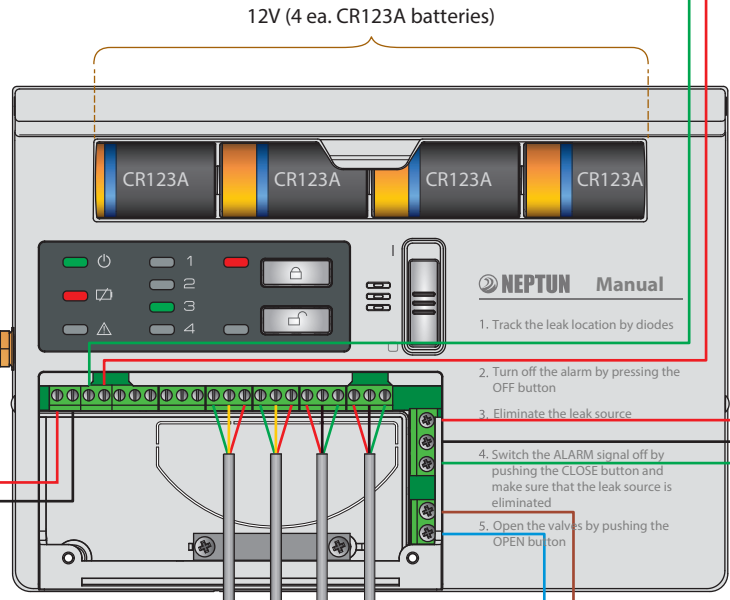

12V Ball Valve
Installed after inlet valves.
Installed valves quantity:
Internal power source used – 2 pcs.
External power source used– up to 6 pcs.

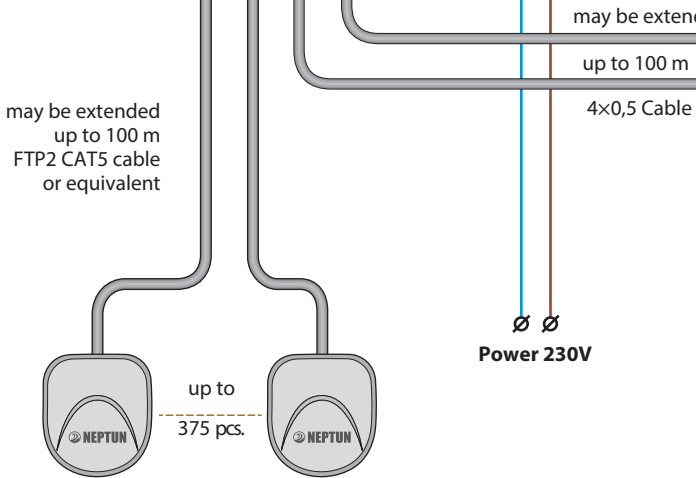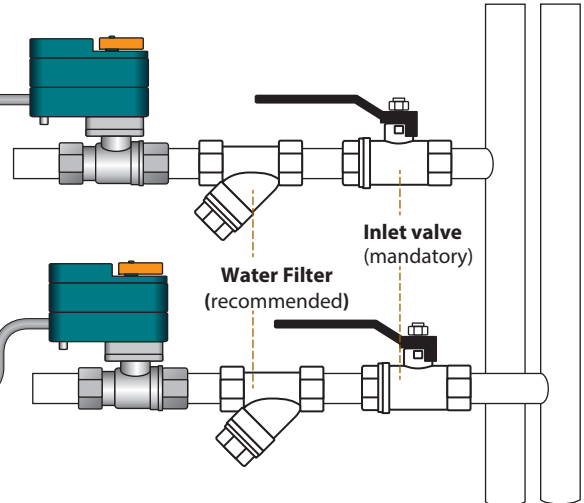

Valve correct position:

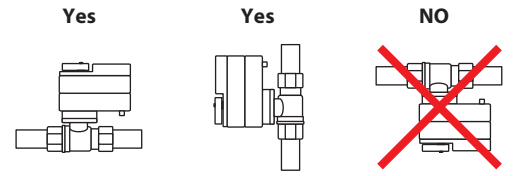


Sensor



CONGRATULATIONS! You purchased Neptun Leak Detection / Flood Prevention System!


Kit Components:

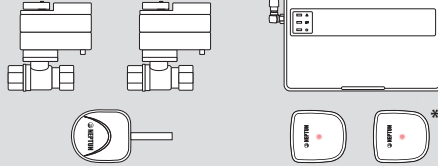

Draw the System Installation Plan



Install the valves 1

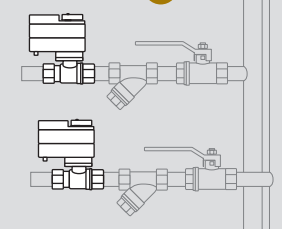

The valves are to be installed **AFTER** the inlet valves!!! (see the reverse)

 
Switch the **ALARM** signal off ( ×1), open valves ( ×1).



The System is ready! Now your home is protected!

Install the wired sensors 2

Aflush the floor




Up on the floor surface




Operation Check

Connect the sensor contacts with metal object

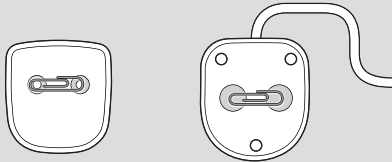

Make sure that the valve/s have closed

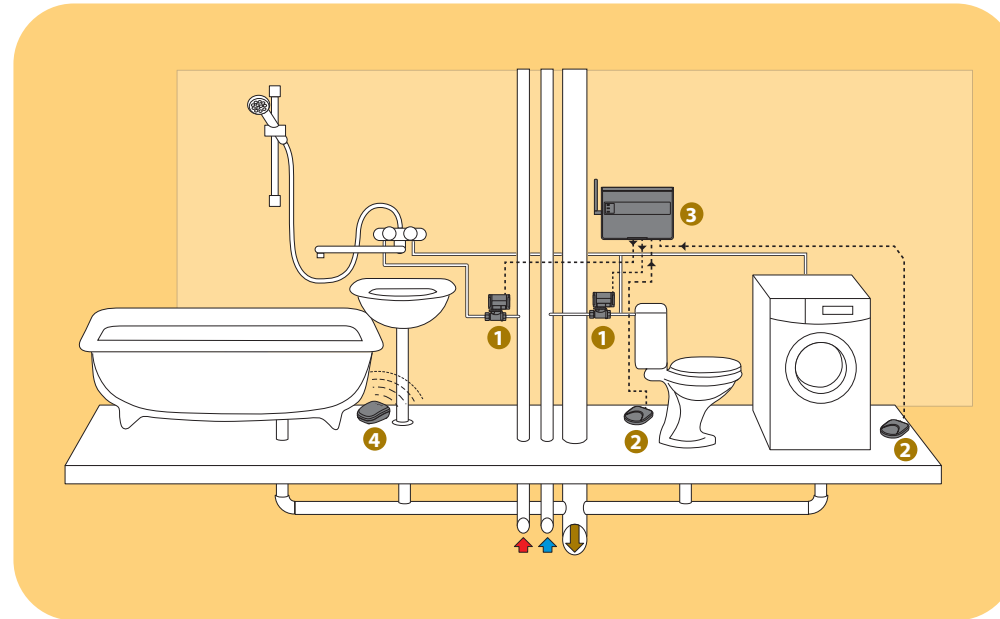

Provide the power for the Module

230V:  (standard)


or

12V:  230V ~ 12V =

(option, 12V power unit is not included into the Set)

Install the Control Module 3

For installation, please remove the device front cover lid

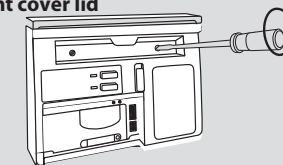

Control Module is connected with four screws in the Battery compartment (not included)

Connect RSW+ Wireless sensors 4



Tune up manual enclosed

Connect all the System components

For installation, please remove the device front cover lid



See the reverse for Connection Schematics